


ASSEMBLY & INSTALLATION INSTRUCTIONS

B385

Trove Sconce 202015

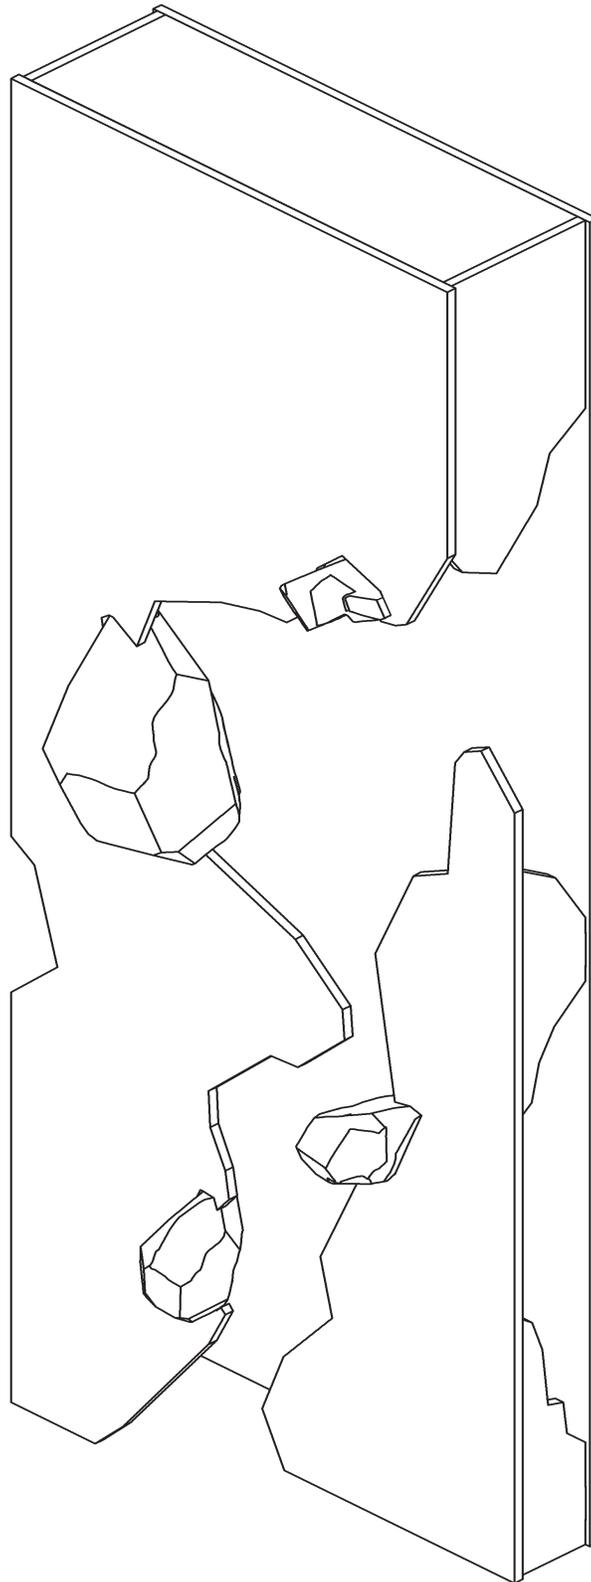

Component Parts

- A Fixture**
- B Mounting Bracket**
- C Ground Screw**
- D Cupped Washer**
- E #8 Screws (4)**
- F Large Crystal**
- G Small Crystals (3)**
- H Spring Clip**



ASSEMBLY & INSTALLATION INSTRUCTIONS

B385

Trove Sconce 202015

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Please Note: After installation extra hardware and accessories are possible due to our kits are used on multiple products and options.

To Install To Wall (Figure 1)

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Carefully unpack the fixture (A) from the carton.
2. Remove mounting bracket (B) from the kit bag.
3. Thread the wires in the electrical box through the hole in the mounting bracket (B) while moving the bracket into position. Place mounting bracket over electrical box so the tabs on mounting bracket line up with the holes on fixture (A). Secure mounting bracket with two machine screws (not provided).

Note: A new electric box comes with screws. When replacing a fixture, retain the existing screws for use


4. Attach a pigtail lead to the mounting bracket (B) using the ground screw (C) and cupped washer (D) found in kit bag.
5. Hold fixture (A) close to wall. Using suitable wire connectors (not provided), connect fixture wires to supply wires (white to white and black to black). Connect all ground wires (bare copper or green to bare copper or green).

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY AND NO BARE WIRE IS EXPOSED.

6. Place fixture (A) over mounting bracket (B). Secure with #8 screws (E) on top and sides of fixture.

CAUTION: BE SURE NO WIRES ARE PINCHED BETWEEN THE FIXTURE AND THE WALL.

7. Follow steps on following page to complete installation.

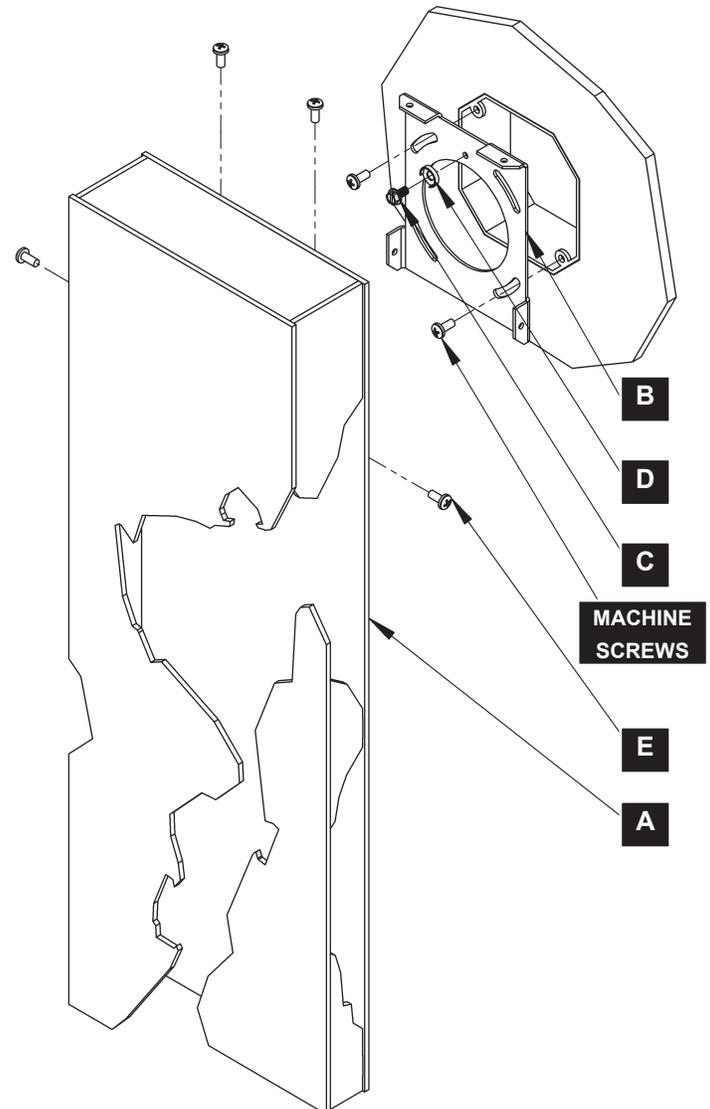

(Figure 1)


Trove Sconce 202015

To Install Crystals (Figures 2 & 3)


1. Locate large crystal (F), 3 small crystals (G) and white gloves provided in the kit bag.
2. Use Figures 2 & 3 as well as slot shape to determine crystal orientation.
3. Crystals have a hole that spring clip (H) slides into. Use the spring clips to attach crystals (F, G) to fixture (A).

Note: It may be necessary to tweak spring clips slightly in order to apply tension to crystals and hold them securely.

4. Restore electricity at main breaker.

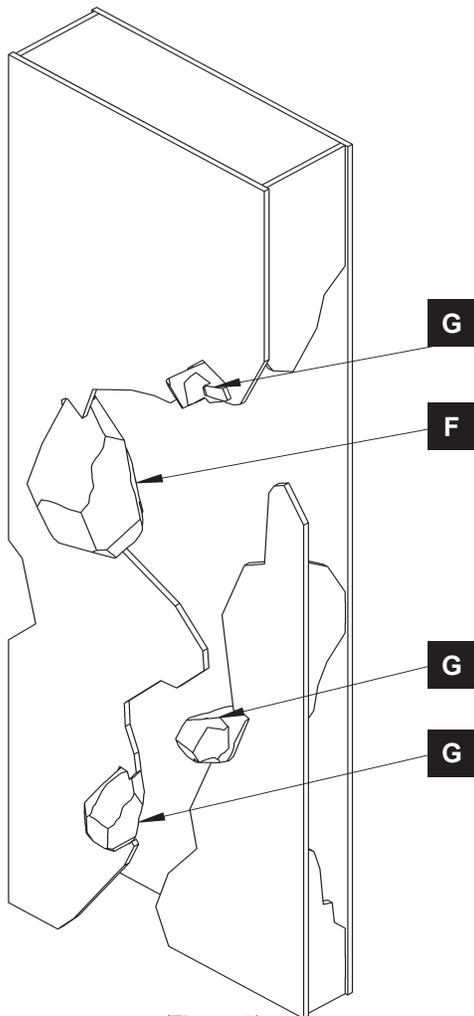

(Figure 2)

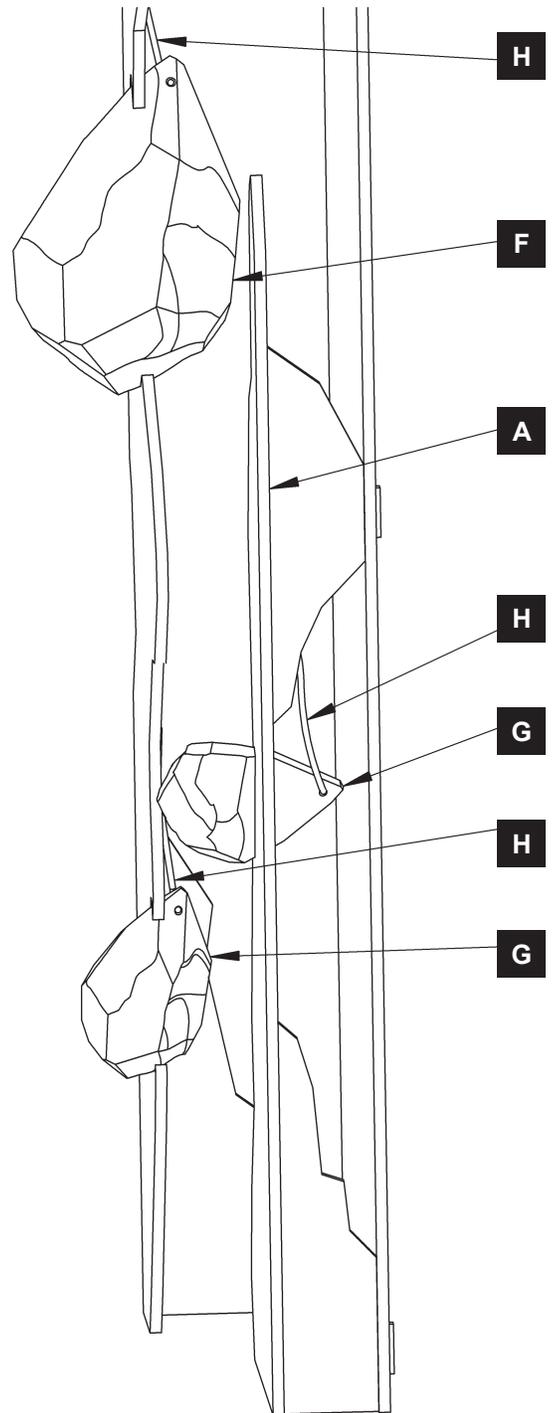

(Figure 3)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

**Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.*



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM